

# Manual

## to rinse the ABC system

Please read carefully and observe!

Before you start replacing the hydraulic oil, find an external container with a capacity of 20 to 30 liters.

Remove the return hose from the reservoir and extend it with another hose into the external container.

While changing the oil, a second person should hold the hose in the container as it could otherwise slip out.

If you have made these preparations, loosen the union nut on the reservoir and pull out the filter.

Take the fresh oil and fill the reservoir to the brim. Then start your vehicle. Press the ABC button until both red LEDs light up and the vehicle is moving up.

The pump sucks the oil out of the reservoir by a quarter. Then press the ABC button again until both diodes are off. Now the vehicle sinks.

When shutting down, the system discharges the old oil via the return line. You can repeat this process of raising and lowering once more (note: the storage tank must not be emptied!).

Run the vehicle and refill oil in the reservoir. Then drive the vehicle up and down again using the ABC button. Repeat this procedure until fresh green hydraulic oil returns via the return line.

Depending on the state of the hydraulic oil in the system, it may also be necessary to rinse several times, since a certain amount of residual dirt remains in the system after each rinse.

**PLEASE MAKE SURE THE STORAGE TANK IS NEVER EMPTY!**

**Do You Have Questions? We are pleased to be available!**



**Zadow Automotive**

**Tel.: 033986/502480**

**Mail: [abcteile24@icloud.com](mailto:abcteile24@icloud.com)**