

ATTENTION!

Installation instructions for hydraulic pump Servo area

Please read carefully and observe!

Please observe the following instructions to prevent further damage to the ABC system!

CLEANING THE SYSTEM

Before installing the replacement part, the entire hydraulic system must be flushed, as metal abrasion or even metal shavings could have occurred in the steering system, particularly if the power steering pump is defective. Otherwise, the new servo pump may leak again after a short period of operation.

AVOID DRY RUN

In particular, pumps with aluminum housings are very sensitive to dry running without oil. Even a short dry run immediately after starting for the first time is enough to damage the power steering pump. This problem can be avoided by first connecting the return hose (usually the hose that is attached with a simple hose clamp or, in the case of servo pumps, the larger one with two threaded connections). Oil is then filled in until it runs out of the pressure connection of the power steering pump. Only then is the pressure connection connected.

Please note that vehicle spare parts should only be installed by a qualified specialist workshop to ensure their proper function and the road safety of the vehicle.