
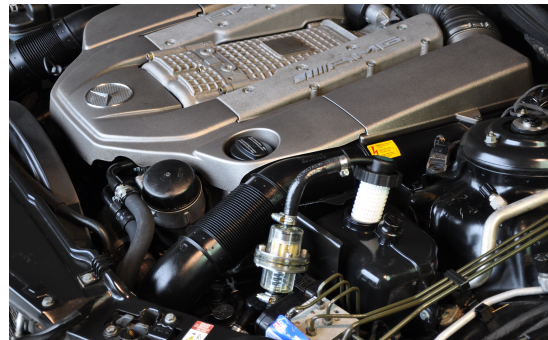


ATTENTION!
Installation note Magnetic filter
Please read carefully and observe!

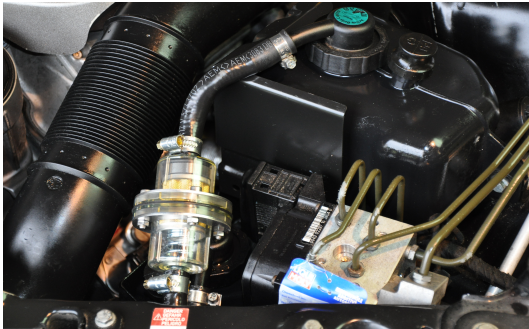

The magnetic filter must be inserted into the black return line leading to the reservoir (black) of the ABC system.

The return line must be cut in one place with a sharp cutting tool. If necessary, the hose can be shortened downwards by between 5 and 7 cm, but without shortening the hose can be laid down well.

ATTENTION: Please note the installation direction!

The flow direction is marked with an arrow on the filter. The magnet must point in the direction of the container.

The hose clamps for attaching the magnetic filter are enclosed. Please do not forcibly tighten the clamps so that the hose clamps.

If you have any questions, we are here for you. Please use the telephone number below or send us an e-mail!



Zadow Automotive

Tel.: 033986/502480

Mail: abcteile24@icloud.com