
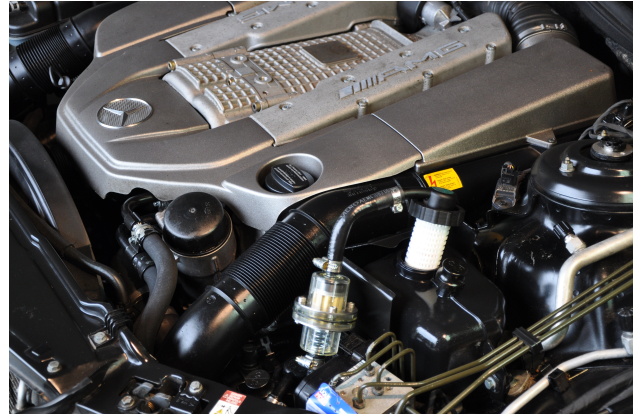


# ATTENTION!

## Installation instructions magnetic filter

Please read carefully and observe!

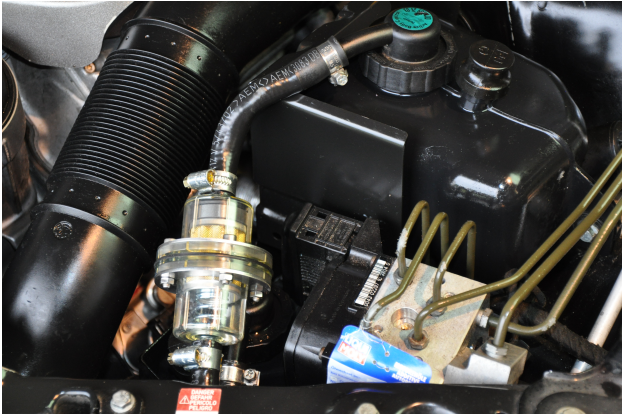

The magnetic filter must be inserted into the black return line that leads to the storage container (black) of the ABC system.

The return line must be cut at one point using a sharp cutting tool. If necessary, the hose can be shortened downwards by between 5 and 7 cm, but the hose can also be easily routed downwards without shortening.

### **ATTENTION: Please pay attention to the installation direction!**

The flow direction is marked with an arrow on the filter. The magnet must point towards the storage container.

The hose clamps for attaching the magnetic filter are included. Please do **not** tighten the clamps forcefully so that the hose does not bulge. **(Note: The hose should fit completely all around!)**

**If you have any questions, we are happy to help you!**

**Please use the telephone number below or write us an email.**

Zädow Automotive  
Kleiner Kamp 6  
19288 Ludwigslust

© 2024 Zädow Automotive



Tel.: 03874 / 6631930  
@:zaedowautomotive@icloud.com  
Onlineshop: abcteile24.de